


Dimensions

EHB20 Model shown for reference

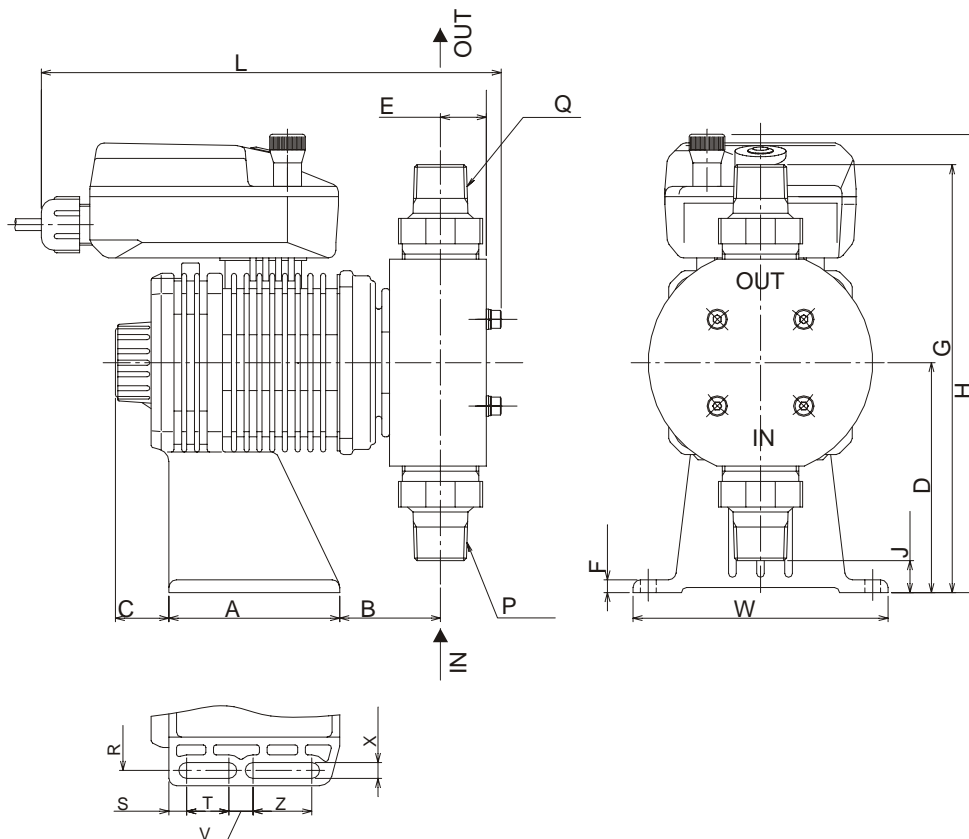


Model				A	B	C	D	E	F	G	H	J	L	P & Q	W
EHB	20	R1	-HV	2.64	1.56	0.83	3.54	0.71	0.20	6.59	6.93	0.49	7.10	½" NPT	3.94
		R2									7.47				
		Y1 Y2									7.56				
EHC	20	R1	-HV	3.82	1.41	0.67	3.94	0.71	0.20	6.99	7.46	0.89	7.96	½" NPT	4.57
		R2									8.33				
		Y1 Y2									7.95				
EHC	30	R1	-HV	3.82	1.41	0.67	3.94	0.71	0.20	7.32	7.46	0.55	7.96	½" NPT	4.57
		R2									8.33				
		Y1 Y2									7.95				

All dimensions in inches

Mounting Dimensions	R	S	T	V	Z	X
EHB all variations	3.46	0.28	0.65	0.37	0.91	0.24
EHC all variations	3.94	0.28	0.67	0.39	1.81	0.24

EHE35 Model Shown for reference

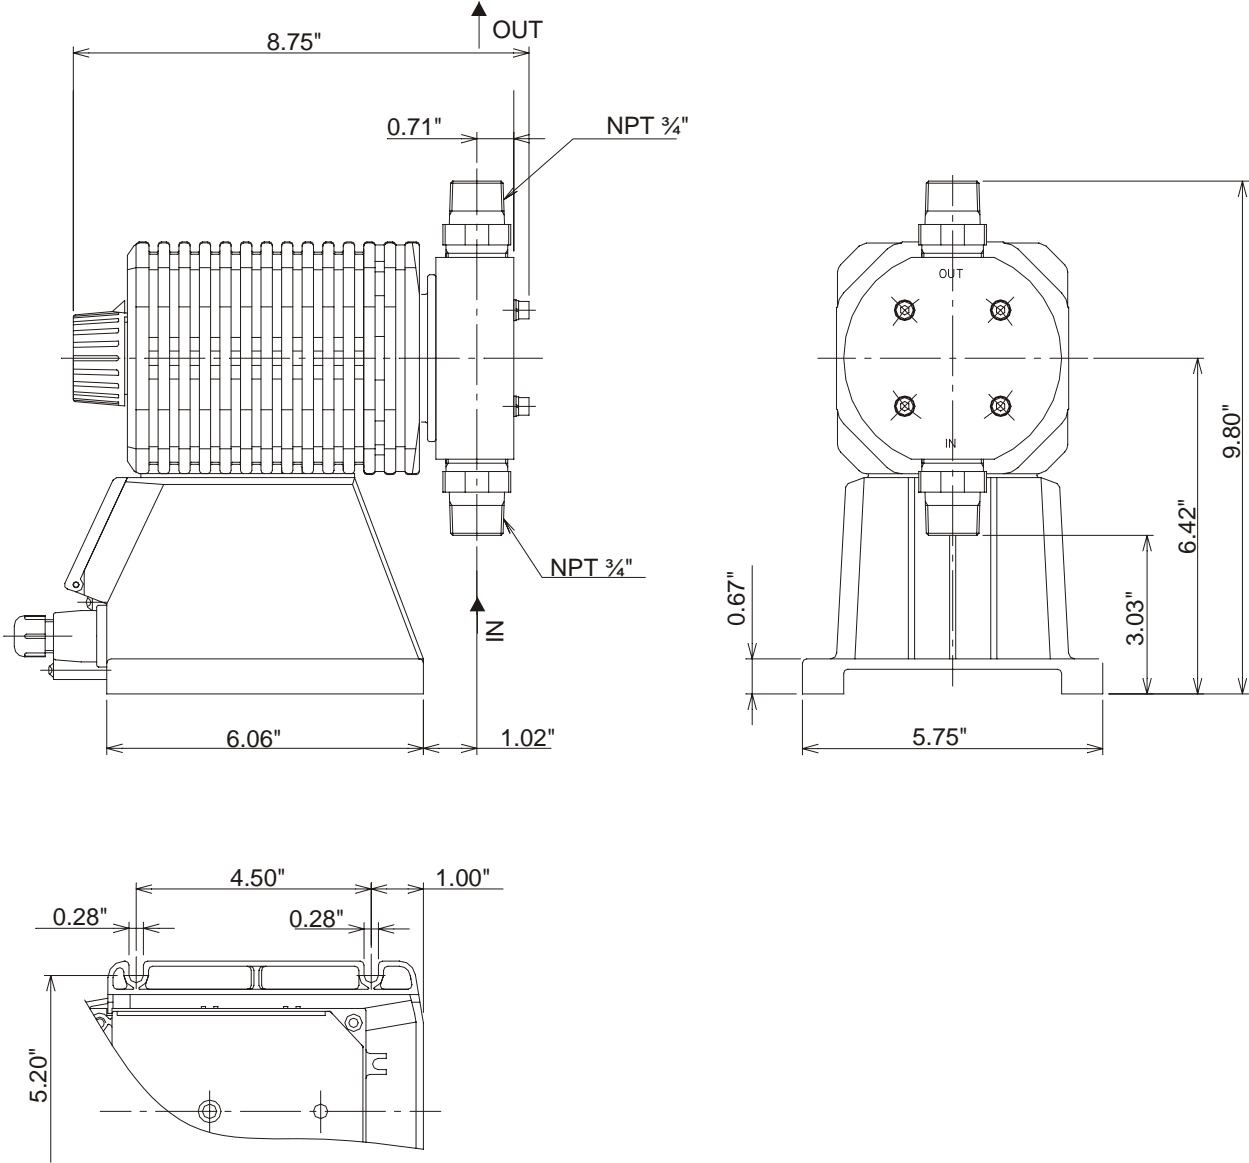

Note: The stroke length knob on EHE pumps can be forced past 100%. This will cause damage to the pump and will void the warranty.